

# What you need to connect your oven to My Electrolux App

-  The oven should be physically installed in your kitchen.
-  The home Wi-Fi signal should be strong where the oven is installed.
-  A smartphone or tablet running an iOS or Android operating system.

Depending on which version of operating system you are running certain functionalities might differ. We recommend you update to the latest OS version for your device.



# How to connect your CombiSteam Pro Smart oven to the My Electrolux App

Make sure you have your home Wi-Fi network password at hand.

**1**  Install **My Electrolux App**.



**2**  Start the app and **Sign up** (or **Login**).



**3**  Press the **Appliances button** at the bottom and then select **Add Appliance** on the screen.

**4**  The app will ask you to start the oven Wi-Fi.

**5**  Press the **Wi-Fi icon**  on your oven screen.




**6**  When the **Wireless Configuration** screen opens, select **Wi-Fi On**.




**7**  Wait until the option **Wireless setup** appears (this could take 30-40 seconds) and then select it.



**8**  When asked to connect the oven to the wireless network, select **Yes**.

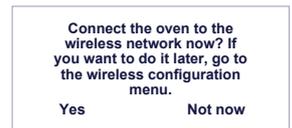

**9**  The oven screen will instruct you to return to the app and finish connecting your oven.

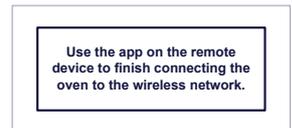

**Congratulations!** Your oven is connected to the My Electrolux App.



To control your oven from smartphone or tablet, **Enable Remote Control** in the oven screen by selecting .



# Get to know the connected features of your oven

## How to send a recipe to the oven

Using My Electrolux App you can access many great tasting recipes and send them with their cooking program directly to the oven. The oven will display the recipe you've sent and the cooking will start automatically.

To send the recipe to the oven:

1. Make sure you enable Remote control through the Oven screen (press  icon on the oven screen and select **Enable**).
2. Access Recipe Wizard in the My Electrolux App.
3. Choose the recipe you wish to cook, and at the bottom of the preparation instructions select "Send to the oven".

.....  
**Info:** Your dish should be in the oven before you start the cooking program. If you open the door during the remote cooking, follow the oven screen to **Resume** cooking process.



## How to use the camera

Use My Electrolux App to access the oven CookView® Camera.

During the cooking process find the camera icon  on your screen and click on it to see the live stream of your food being cooked in the oven.

.....  
**Info:** The camera is integrated in your ovens door handle.



## How to connect your oven to additional smartphones?

1. Install the My Electrolux App on another smartphone or tablet
2. Login to the app using the same login details you used on the first smartphone.

